

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

No pollution angle check valve NF EA 3046 ACS to protect drinking water networks.

Brass CW617N-4MS body, nylon disc and NBR gasket.

Weak head loss thanks to the cylindrical internal designing.

Double axial and lateral guide for a better centering of the throttle on the seat.

Controlable check valve with polyamide plug, 10 years warranty.



Size : DN3/4" to DN1"

Connection : Free nut – Male BSP

Min Temperature : +5°C

Max Temperature : +90°C

Max Pressure : 10 Bars

Specifications : Check valve EA 3046

Controlable

Nylon cap

NBR gasket

Weak head loss

Materials : Brass body CW617N-4MS according to EN 12165

*the installation defects and wear defects are not covered by the guarantee

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

SPECIFICATIONS :

- Respect the flow direction indicated by the arrow
- Free nut / Male BSP
- Controlable
- Weak head loss thanks to the cylindrical internal designing
- Stainless steel spring
- NBR gasket
- Brass CW617N body for a better mechanical strength
- 3 types of drains : polyamide, brass, no losable cap to control disc tightness
- Axial and lateral guide for a perfect centering of the disc on the seat
- Caps 1/4" BSP
- 10 years manufacture warranty (the installation defects and wear defects are not covered by the guarantee)


USE :

- Water distribution
- For fluids category 1 and 2 according to EN 1717
- Min Temperature Ts : + 5°C
- Max Temperature Ts : + 90°C
- Max Pressure Ps : 10 bars

HEAD LOSS GRAPH DN 3/4" :

Pressure

(mbar)

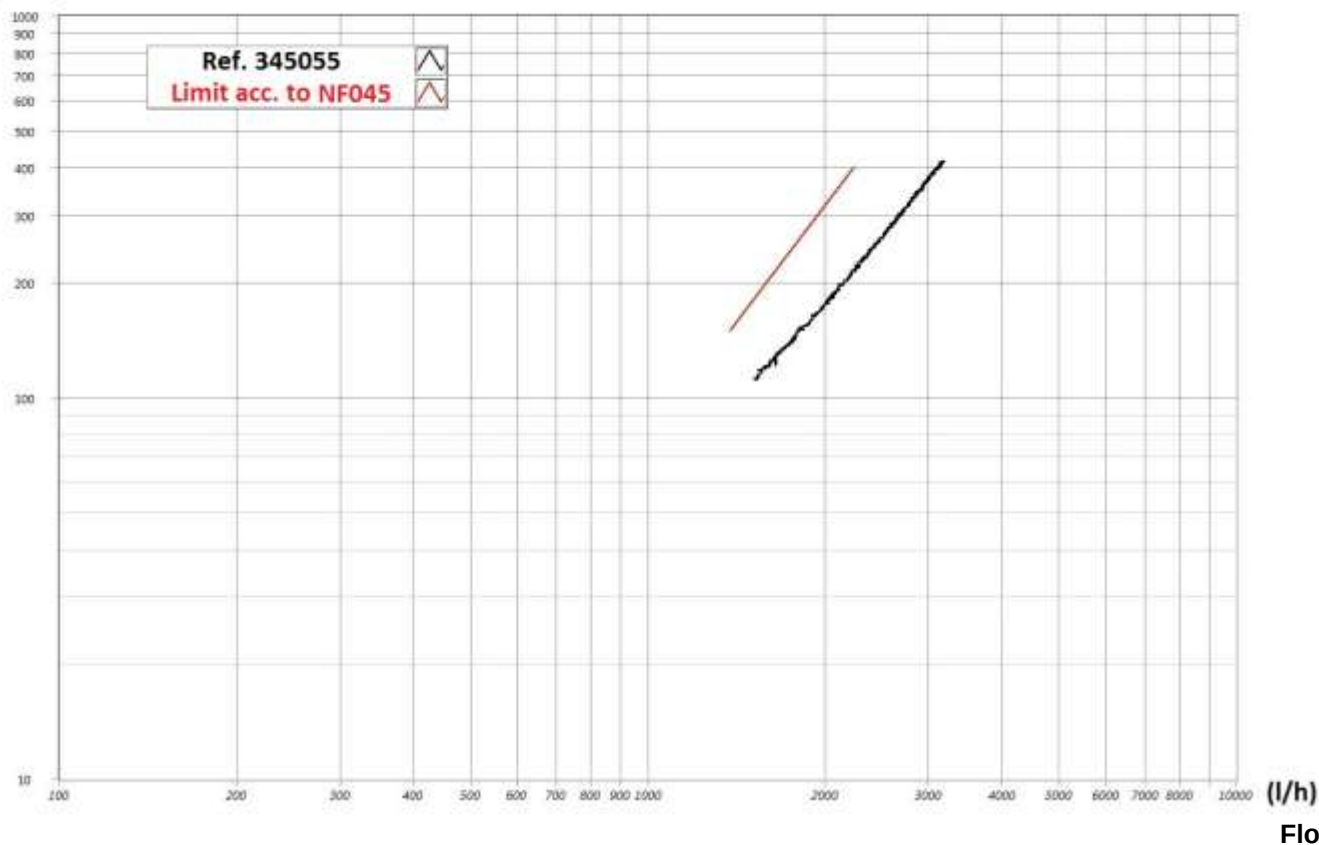

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

HEAD LOSS GRAPH DN 1" :

Pressure



Flow

FLOW COEFFICIENT Kv (m³ / h) :

Ref. Sferaco	345055	345066
DN	3/4"	1"
Kvs (m ³ /h)	4.7	7.35

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE


WORKING :

Operating principle

The anti-pollution check valve consists of a valve body (1), a check valve (2) and, if necessary, one or more inspection points (3) for operation checking and system draining procedures. The check valve (2) borders two different zones: one upstream or at the inlet (A) and one downstream or at the outlet (B).


Correct conditions of flow

In correct flow conditions, the check valve (2) opens automatically when the pressure in the flow direction upstream (A) is greater than the downstream value (B).

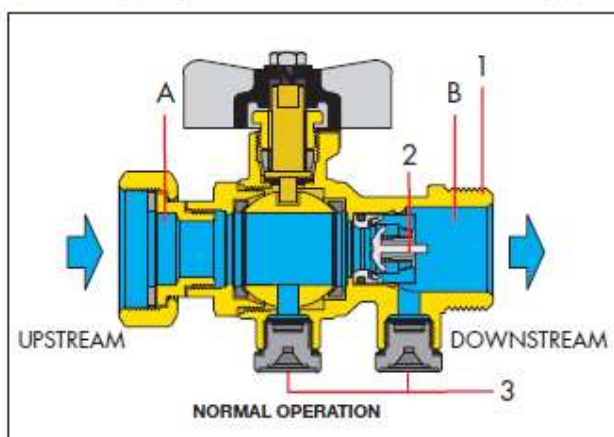


No flow conditions

The check valve (2) closes in advance under the action of the force exerted by the spring when the pressure downstream (B) tends to equal the value upstream (A), after the flow has stopped.

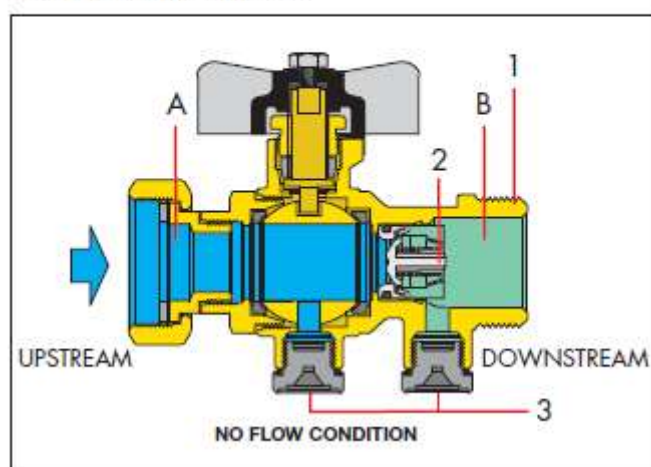

Upstream pressure loss

The check valve (2) remains closed, preventing water which has already been sent to the user from flowing back towards the public network.

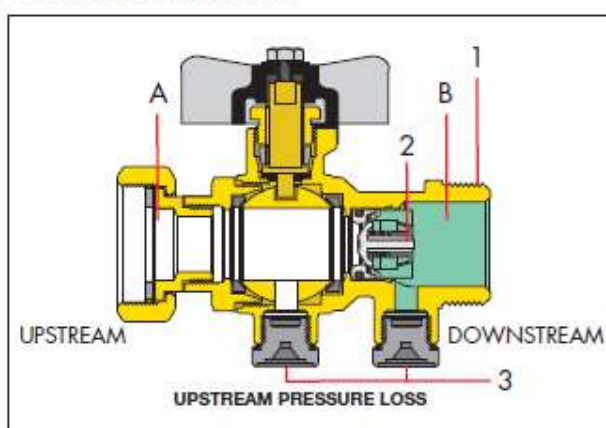

Downstream pressure increase

If the pressure in the downstream zone (B) increases until it exceeds the upstream pressure value (A), the check valve (2) remains closed, thus preventing water that has already been sent to the user from flowing back towards the public network.

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

OPENING PRESSURE :

- Opening pressure 5 mbar

RANGE :




- No pollution angle check valve with free nut BSP cylindrical – male BSP with 2 polyamide caps 1/4" from DN 3/4" to DN 1" **Ref.3450**



- No pollution angle check valve with free nut BSP cylindrical – male BSP with 2 no losable caps 1/4" from DN 3/4" to DN 1" **Ref.3451**


MATERIALS :

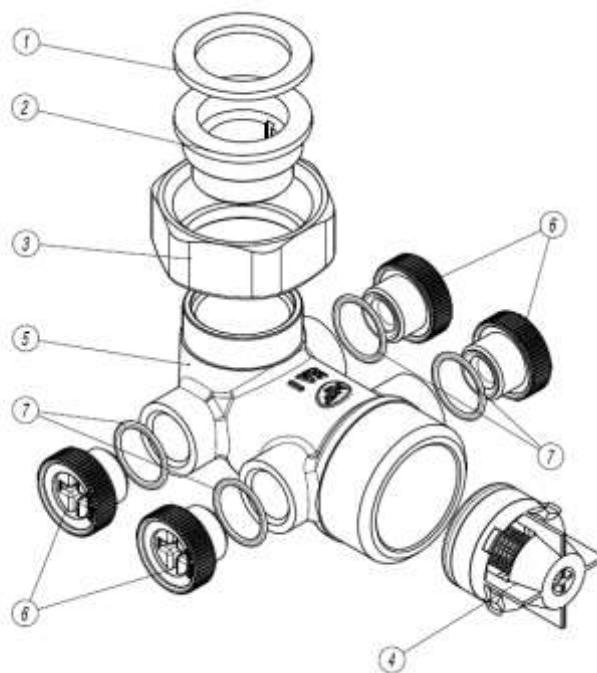

Item	Designation	Materials
1	Gasket	Fiber (FASIT 50)
2	End	Brass CW614N-4MS according to EN 12164
3	Free nut	Brass CW617N-4MS according to EN 12165
4	Throttle	POM
5	Body	Brass CW617N-4MS according to EN 12165
6	Cap	PA66G30
7	O ring	NBR

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

SIZE (in mm) :

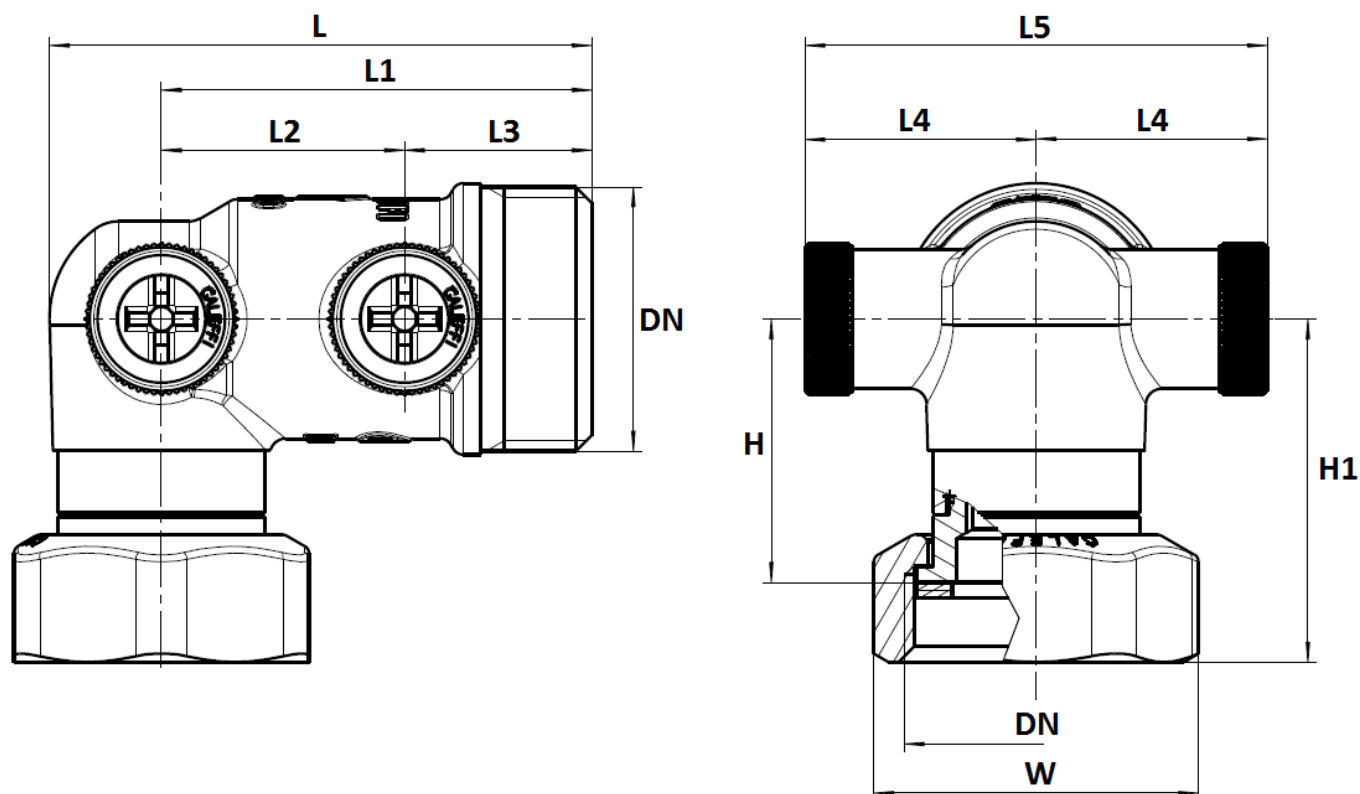

Ref.	DN	3/4"	1"
3450 3451	L	61	68
	L1	50	54
	L2	28.5	30.5
	L3	21.5	23.5
3450	L4	25.5	29
	L5	51	58
3450 3451	H	27.5	33
	H1	36	43
	W (on flat)	30	37
3450	Weight (in Kg)	0.2	0.3

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE**STANDARDS :**

- Manufacturer certified ISO 9001 : 2015 and ISO 14001 : 2015
- DIRECTIVE 2014/68/EU : Products excluded from directive (Article 1. § 2b)
- French water agreement **A.C.S. N° 19 ACC LY 328**
- Designing according to EN 13959
- Check valves according to **NF045 datasheet n°1 and 6**
- Threaded male and female BSP cylindrical ends according to ISO 228-1

ADVICE : Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages.
The customer must check the right choice of the products with the real service conditions.

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : info@sferaco.fr

NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

Backflow

Drinking water supplied by the public network may suffer from hazardous pollution caused mainly by contaminated fluids from plumbing systems flowing back directly into the public network.

This phenomenon, called "backflow", occurs when:

- the pressure in the public network is lower than that in the plumbing circuit receiving the supply (back siphoning). This situation may occur when a pipe is broken in the public system or when other consumer demand on the public network is very heavy.
- the pressure in the plumbing circuit receiving the supply rises (back pressure) due, for example, to water being pumped from a well.



Risk assessment

Given the potential dangers of the phenomenon and the requirements of current regulations, the risk of pollution caused by backflow must be assessed on the basis of the type of system and the characteristics of the fluid that flows inside it. A suitable backflow prevention device must be selected on the basis of the assessment performed by the system designer and the public network supplier. The device must be located along the supply line at the points at risk of backflow which would be hazardous to human health.

The protection can be provided by fitting a check valve at critical points in the circuit, at the inlet from the public network or in the internal plumbing system. This will prevent the backflow of polluted water in all systems for which direct connection to the public or an internal network is considered hazardous.

Application of the EA type anti-pollution check valve – with reference to European standard EN 1717 and EN 13959

Proper use of the EA type anti-pollution check valve is regulated by the new European standards relating to the prevention of pollution caused by backflow.

The reference standard is EN 1717: 2000 "Protection against pollution of drinking water in hydraulic systems and general requirements for the devices used to prevent pollution caused by backflow".

In this standard, the water in the systems is classified according to the level of risk it represents for human health.

Category 1:

Water suitable for human consumption supplied by the water supplier.

Category 2:

Fluid that does not represent a health hazard, as in number 1, the quality of which has been compromised due to changes in temperature, taste, smell or appearance.

Category 3:

Fluid that represents a slight health risk due to the presence of one or more harmful substances.

Category 4:

Fluid that represents a health hazard due to the presence of one or more "toxic" or "highly toxic" substances, or one or more radioactive, mutagenic or carcinogenic substances.

Category 5:

Fluid that represents a severe health hazard due to the presence of microbiological or viral elements.

According to this classification, suitable backflow prevention devices must be fitted in water distribution plant systems.

EA type anti-pollution check valves can be used to offer protection against the risk of water contamination up to category 2.

For category 3 water, it is necessary to use a CA type backflow preventer.

The table below, called the "Protection matrix", associates the various types of system with the relative fluid categories and has been created based on the indications provided in the European regulations.

The new European standard EN 13959 – "Anti-pollution check valves from DN 6 to DN 250. Family E, type A, B, C and D." defines the functional, dimensional and mechanical requirements of anti-pollution check valves.

Protection matrix		
Type of system	Cat. of fluid	
	2	3
General		
Hot and cold water mixing devices in domestic water systems	*	
Water cooling devices for air conditioning units, without additives	*	
Sterilisers for packaged or disinfected materials		*
Water in primary domestic heating system circuits, without additives		*
Domestic, residential or commercial gardens		
Hand-held fertiliser sprayers for use in domestic gardens		*
Watering systems, without fertilisers or insecticides, with sprinkler fixed to the ground at a depth of not more than 150 mm		*
Water softeners		
Domestic water softeners regenerated with common salt	*	
Commercial water softeners (only regenerated with common salt)		*
Commercial applications		
Automatic dispensers with injection of ingredients or CO ₂		*
Automatic dispensers without injection of ingredients or CO ₂	*	
Machines to wash out drink distribution pipes in restaurants		*
Hairdresser rinsing systems	*	
Medicine		
X-ray machine cooling systems	*	
Food applications		
Ice-making machines	*	
Large kitchen machines with automatic filling system	*	
Household applications		
Water in sinks, baths and showers	*	
Domestic dishwashers and washing machines		*
Flexible pipes with controlled flow spray nozzles or stop cock		*
Domestic dialysis machines		*


NO POLLUTION ANGLE CHECK VALVE EA 3046 NF CALEFFI SCUDO FEMALE-MALE

INSTALLATION :

Before installation, make sure that the device is suitable for protecting the supply system, in relation to the type of fluid used in the system.

The controllable check valve should be installed after a shut-off valve, upstream.

The unit should be installed in an accessible zone.

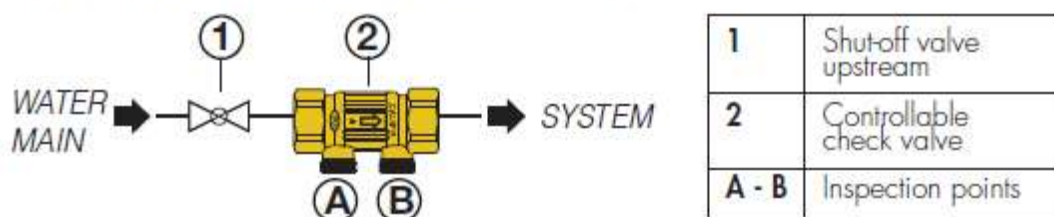

Before installing the check valve it will be necessary to clean the piping with a high-capacity jet of water. Poor cleaning of the system can easily impair the operation of the device.

Inspection and operation checking procedure

The inspection and operation checking procedures should be carried out at least once a year.

- 1) Check whether the installation standards still require the application of the same device for the type of fluid used in the system.
- 2) Make sure that the hazard level of the fluid inside the system has not altered over time.
- 3) Check that there are no leaks or areas of corrosion or deterioration.
- 4) Perform the check valve seal operation checking procedure; when the water mains system pressure (and therefore the pressure upstream of the check valve) drops, the valve should close and prevent the water in the system from flowing back into the mains supply:
 - a. in order to maintain the system pressure in the absence of flow, close all the shut-off valves downstream of the valve and the inspection points for the same check valve.
 - b. close the shut-off valve upstream (1) and open the inspection point (A) of the check valve.
The flow should stop after the part of piping, which has been cut off, is emptied.
 - c. if this is not the case, check the seal of the shut-off valve upstream (1) and, if the flow through the inspection point (A) continues, replace the check valve.
 - d. the inspection point (B) (where present) may be used to empty the system.